

Instructions for Programmable Digital Timer-twin pack DCT2PC

This unit has a rechargeable battery fitted to retain the time and program in memory should the power to the unit be disrupted. If the display is blank, plug the unit into a live wall socket and leave for a few hours to charge the battery.

To set the day current time

Press and hold the SET button until the days 'flash'.
Press the V+ button until the current day is displayed.
Press the SET button. The day is now set.

The hours will now 'flash'.
Press the V+ button until the correct hour is displayed.
Press the SET button. The hour is now set.

The minutes will now 'flash'.
Press the V+ button until the correct minute is displayed.
Press the SET button. The minutes are now set.

To set a Program

Press the V+ button once. 1ON will be displayed in the lower left hand of the display. This indicates the setting of the ON time for the first program.

Press SET. The days of the week will 'flash'. Press the V+ button until the required day, sequence of days or the whole week is displayed. Press the SET button.

The hours will 'flash'. Press the V+ button until the required ON hour is displayed. Press the SET button.

The minutes will 'flash'. Press the V+ button until the required ON minute is displayed. Press the SET button.

Press the V+ button. 1OFF will be displayed in the lower left hand of the display. This indicates the setting of the OFF time for the first program.

Press SET. The days of the week will 'flash'. Press the V+ button until the required day, sequence of days or the whole week is displayed. Press the SET button. **NOTE: The day, sequence of days or whole week must be the same as for the ON setting.**

The hours will 'flash'. Press the V+ button until the required OFF hour is displayed. Press the SET button.

The minutes will 'flash'. Press the V+ button until the required OFF minute is displayed. Press the SET button.

The ON / OFF program has now been set.

If this is all that is required, leave the timer alone for a few minutes and the time current will be displayed.

To set a second ON / Off program, after you have completed the first program, press the V+ button.

2ON will be displayed in the lower left hand of the display. Repeat the sequence detailed above for the second program.

Press the ON/OFF button until a line shows above the AUTO marking. Plug the timer into a socket-outlet, switch the socket-outlet on, plug you appliance into the timer.

Tips

For every ON program, there must be a corresponding OFF program.

The days for the ON and OFF program must be identical.

When setting AUTO for the timer, it is best to arrive at the AUTO from the OFF. That is press the ON/OFF button so that you go from OFF to AUTO.

If a mistake is made or for some reason the programming did not work, press the RESET button to clear any incorrect or spurious settings and start again.